

SERVICE MANUAL

COMPACT UTILITY TRACTOR

YM Series

YM342A

YM347A

YM359A

YANMAR

CALIFORNIA

Proposition 65 WARNING

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

IMPORTANT


Pursuant to California Public Resources Code Section 4442.6

WARNING - Operation of This Equipment May Create Sparks That Can Start Fires Around Dry Vegetation. A Spark Arrestor May be Required. The Operator Should Contact Local Fire Agencies For Laws or Regulations Relating to Fire Prevention Requirements.

1A8250-65390

NOTE

The following decal is applicable only for YM342A, YM347A and YM359A.

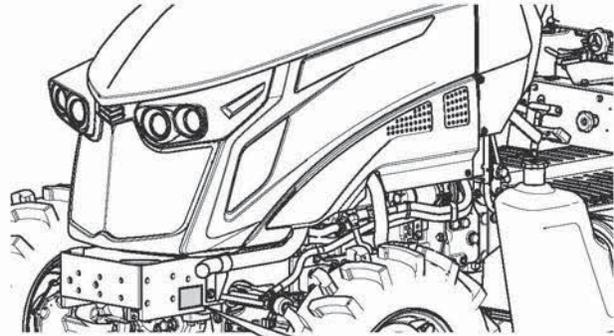

IMPORTANT

Pursuant to California Public Resources Code Section 4442.6
WARNING - Operation of This Equipment May Create Sparks That Can Start Fires Around Dry Vegetation. A Spark Arrestor May be Required. The Operator Should Contact Local Fire Agencies For Laws or Regulations Relating to Fire Prevention Requirements.

1A8250-65390

Operator's Record

Owner's Name	
Owner's Address	
Owner's Phone Number	
Dealer/Seller Name	
Dealer/Seller Address	
Dealer/Seller Phone Number	

In the event of exporting this product and/or providing the related technical information to non-residents or residents outside of the United States, it is required that you comply with the export and trade control laws and regulations of the United States and other applicable countries. Please carefully identify and follow applicable laws, regulations and procedures as required.

CHAPTER 1. SAFETY

Table of Contents

1-1 SAFETY INFORMATION and PRACTICES	1
1-1-1 Understand the Signal Words	2
1-1-2 Service the Tractor Safely.....	2
1-1-3 Prepare the Work Area Before Starting a Service Work.....	3
1-1-4 Prepare the Tools and Parts	3
1-1-5 Safety Precautions: Servicing the Tire	3
1-1-6 Safety Precautions: Servicing the Battery.....	4
1-1-7 Safety Precautions: Servicing High Pressure Hydraulic Fluid Lines.....	4
1-1-8 Safety Precautions: When Servicing the Cooling System	5
1-1-9 Safety Precautions: Servicing Rotating Blades, Augers and Power Take Off (PTO) Shafts	5
1-1-10 Ecology and Environment: Disposal of Hazardous Waste Materials	5
1-2 SAFETY INFORMATION FOR CHEMICAL PRODUCTS	6
1-3 BEFORE RETURNING THE TRACTOR AND IMPLEMENT TO THE OWNER.....	6
1-4 EMPLOYEE: TRACTOR OPERATING INSTRUCTIONS.....	7
1-5 CHILD LABOR UNDER 16 YEARS OLD	7

CHAPTER 2. INTRODUCTION

Table of Contents

2-1 Service Manual Intention and Usage	1
2-2 Engine.....	1
2-3 Fasteners.....	2
2-4 Assembly Procedures	2
2-5 The Tractor.....	3
2-6 Special Tools.....	3
2-7 Maintenance Check List.....	4
2-8 Diesel Fuel Specifications	7
2-9 Oil and Grease	8
2-10 Fasteners Identification	9
2-11 Metric Bolt Torque Table.....	10
2-12 Hydraulic Fittings	11
2-13 Hardware Description Table	12
2-14 Specifications Table.....	14
2-15 Traveling Speeds	16
2-16 5S Activities	18

CHAPTER 3. ENGINE

Table of Contents

3-1 Structure and Functions	2
3-1-1 Names of Parts	3
3-1-2 Fuel System	6
3-1-3 Lubrication System	11
3-1-4 Coolant System.....	13
3-2 Checks and Adjustments.....	16
3-2-1 Engine Service Standards	16
3-2-2 Torque for Bolts and Nuts.....	17
3-3 Electronic Control System.....	20
3-3-1 System Structure	20
3-3-2 System Structure	21
3-3-3 Procedure of Diesel Particulate Filter (DPF) regeneration.....	24
3-3-4 Reset regeneration	25
3-3-5 Stationary regeneration.....	28
3-3-6 Engine output limitation for DPF	31
3-3-7 Main Electronic Control Components and Features	33
3-4 Regenerating the DPF (Exhaust Filter) by SA-D.....	35
3-4-1 Forced regeneration by Smart Assist Direct (SA-D)	35
3-4-2 Stationary regeneration by SA-D	36
3-4-3 Recovery regeneration by SA-D	38
3-4-4 Maintenance of DPF parts	41
3-4-5 Procedure of replacing DPF with SA-D.....	43
3-4-6 Replacing Soot Filter with SA-D.....	47
3-4-7 Replacing DOC with SA-D	48
3-5 Maintenance.....	49
3-5-1 Piston	49
3-5-2 Lubricating oil pressure	57
3-5-3 Fuel injection	58
3-5-4 Engine compression	70
3-5-5 Measuring and adjusting valve clearance.....	72
3-5-6 Maintenance standards.....	74
3-5-7 Special service tools	84
3-6 Rewriting & replacing ECU.....	90

CHAPTER 4. ELECTRICAL

Table of Contents

4-1 System Components	3
4-2 Engine Starting Circuit.....	11
4-2-1 Outline.....	11
4-2-2 Position of Components	12
4-2-3 Function of Components	16
4-2-4 Partial Circuit Diagram	18
4-2-5 Malfunction Diagnosis Table	22
4-3 Charge Circuit.....	23
4-3-1 Outline.....	23
4-3-2 Position of Components	23
4-3-3 Function of Components.....	26
4-3-4 Partial Circuit Diagram	27
4-3-5 Malfunction Diagnosis Table	30
4-4 Lights and Horn Circuit.....	31
4-4-1 Outline.....	31
4-4-2 Position of Components	32
4-4-3 Function of Components.....	37
4-4-4 Partial Circuit Diagram	39
4-4-5 Malfunction Diagnosis Table	44
4-5 PTO Circuit.....	45
4-5-1 Outline.....	45
4-5-2 Position of Components	45
4-5-3 Function of Components.....	47
4-5-4 Partial Circuit Diagram	48
4-5-5 Malfunction Diagnosis Table	51
4-6 Meter	52
4-6-1 Outline.....	52
4-6-2 Position of Components	52
4-6-3 Function of Components.....	55
4-6-4 Instrument Panel.....	56
4-6-5 Partial Circuit Diagram	58
4-6-6 Malfunction Diagnosis Table	63

CHAPTER 4. ELECTRICAL

Table of Contents

4-7 Inspecting Electrical Parts	64
4-7-1 Single Part Check Point	64

CHAPTER 5. POWER TRAIN

Table of Contents

5-1 Component Location	3
5-1-1 Rear Power Take Off (PTO)	3
5-1-2 Rear Power Take Off (PTO) Shift	4
5-1-3 Power Take Off (PTO) Clutch and Brakes	5
5-1-4 Differential Gear	6
5-1-5 Final Drive Axle Housing	7
5-1-6 4-Wheel Drive Output Shaft	8
5-1-7 Differential Lock Fork Assembly	9
5-1-8 Range Gear Transmission	10
5-1-9 Range Gear Transmission Lever	11
5-1-10 Reverser Gear	12
5-1-11 Reverser Shift	13
5-1-12 Main Shift Gear	14
5-1-13 Main Shift	15
5-1-14 4WD Drive	16
5-1-15 Front Axle Assembly (1)	17
5-1-16 Front Axle Assembly (2)	18
5-1-17 Front Axle Assembly (3)	19
5-1-18 Power Take Off (PTO) Control Valve	20
5-2 Theory of Operation	22
5-2-1 Structure and Function	22
1. Transmission mechanism diagram	22
2. Gear shift and power transmission passage	25
3. Reverser	26
4. Main Shift	28
5. Range shift	31
6. Power Take Off (PTO)	32
5-3 Test and Adjustment	33
5-3-1 Adjustment of Clutch Pedal Linkage	33
5-3-2 Adjustment of Toe-In	35
5-3-3 Adjustment of Accelerator Cable	37
5-3-4 Adjustment of Forward/N/Reverse Rod	39
5-3-5 Power Take Off (PTO) Hydraulic Valve Pressure Test	40
5-3-6 Adjustment of Differential Backlash	42

CHAPTER 5. POWER TRAIN

Table of Contents

5-4 Repair (Disassembly/Assembly)	44
5-4 Tips for Working on Transmissions	44
5-4-1 Split Tractor	45
5-4-2 Disassemble, Inspect and Assemble PTO Shift	85
5-4-3 Disassemble, Inspect and Assemble PTO Clutch and Brake	92
5-4-4 Disassemble, Inspect and Assemble Rear Axle	102
5-4-5 Disassemble, Inspect and Assemble Differential Gear	115
5-4-6 Disassemble, Inspect and Assemble Front Drive Shaft	130
5-4-7 Disassemble, Inspect and Assemble Differential Assy	140
5-4-8 Disassemble, Inspect and Assemble Range Shift	146
5-4-9 Disassemble, Inspect and Assemble Reverser	158
5-4-10 Disassemble, Inspect and Assemble Main Shift	166
5-4-11 Disassemble, Inspect and Assemble Front Axle Case	190
5-4-12 Disassemble, Inspect and Assemble Front Bearing Case	198
5-4-13 Disassemble, Inspect and Assemble Front Gearbox	203
5-4-14 Disassemble, Inspect and Assemble Front Gear L Case	210
5-4-15 Disassemble, Inspect and Assemble Front Differential Gear Assy	217
5-4-16 Disassemble, Inspect and Assemble Front 4-Wheel Drive Gear Assy	225
5-4-17 Disassemble, Inspect and Assemble PTO Valve	230

CHAPTER 6. STEERING

Table of Contents

6-1 Component Location	2
6-1-1 Power Steering Valve	2
6-1-2 Power Steering Cylinder	3
6-1-3 Hydraulic Pump.....	4
6-2 Theory of Operation	5
6-2-1 Power Steering (Orbitrol®) Valve.....	5
6-3 Diagnostics	13
6-3-1 Steering.....	13
6-4 Test and Adjustment (Steering)	16
6-4-1 Steering System Test.....	16
6-4-2 PST Cylinder Assy Leak Test	18
6-4-3 PST Pump Assy Flow Test	19
6-4-4 Power Steering Relief Pressure Measurement.....	21
6-5 Repair (Disassembly/Assembly)	23
6-5-1 Disassemble, Inspect and Assemble PST Valve Assy	23
6-5-2 Disassemble, Inspect and Assemble PST Cylinder.....	31
6-5-3 Disassemble, Inspect and Assemble 8 Pump Assy (For YM342A/YM347A)	43

CHAPTER 7. HYDRAULICS

Table of Contents

7-1 Component Location	2
7-1-1 Hydraulic Pump.....	2
7-1-2 Control Valve Assy.....	3
7-1-3 HYD Housing Assy	4
7-2 Theory of Operation	8
7-2-1 Hydraulics	8
7-3 Diagnostics	24
7-3-1 Hydraulics	24
7-4 Test and Adjustment	32
7-4-1 Bleeding of Hydraulic System	32
7-4-2 Hydraulic Pump Flow Test	35
7-4-3 Relief Valve Pressure Test	37
7-4-4 Adjustment of Position Feedback Rod Position	40
7-5 Repair (Disassembly/Assembly)	42
7-5-1 Disassemble, Inspect and Assemble Hydraulic Pump.....	42
7-5-2 Disassemble, Inspect and Assemble Control Valve Assy.....	48
7-5-3 Disassemble, Inspect and Assemble Hydraulic Lift	58

CHAPTER 8. BRAKES

Table of Contents

8-1 Component Location	2
8-1-1 Brake Assembly	2
8-1-2 Brake and Clutch Pedal and Linkage.....	3
8-2 Theory of Operation	7
8-2-1 Brakes	7
8-3 Diagnostics	8
8-3-1 Brakes.....	8
8-4 Test and Adjustment	12
8-4-1 Adjustment of Brake Pedals.....	12
8-5 Repair (Disassembly/Assembly)	14
8-5-1 Disassemble, Inspect and Assemble the Brakes	14
8-5-2 Disassemble, Inspect and Assemble Brake and Clutch Pedal and Linkage.....	23

CHAPTER 9. MISCELLANEOUS

Table of Contents

9-1 Repair (Disassembly/Assembly)	2
9-1-1 Remove and Install Three-Point Hitch Link Kit	2
9-1-2 Remove and Install Front Wheels	9
9-1-3 Remove and Install Rear Wheels	12
9-1-4 Remove and Install Seat Assy	15
9-1-5 Remove and Install Safety Frame	17
9-1-6 Remove and Install Steering Wheel	21
9-1-7 Remove and Install Combination Meter	23
9-1-8 Remove and Install Dashboard	25
9-1-9 Remove and Install Steering Column (with PST Valve Assy)	28
9-1-10 Remove and Install Bonnet	32
9-1-11 Remove and Install Battery	36
9-1-12 Remove and Install 4-Wheel Drive Propeller Shaft	39
9-1-13 Remove and Install Radiator Assy	43
9-1-14 Remove and Install Muffler and Exhaust Pipe	53
9-1-15 Remove and Install Floor	56
9-1-16 Remove and Install Fender	61
9-1-17 Remove and Install Fuel Tank	64
9-1-18 Remove and Install Engine Assembly	71
9-2 Error code	76
9-2-1 Outline	76
9-2-2 Error Code (Engine)	77
9-2-3 Error Code (Others)	90
9-3 Overall circuit diagram	91
9-4 Drawing of harness	100