


INNOVATIVE
TECHNOLOGY
PARTNER

LS LOADER OPERATOR MANUAL

LL3106

NON-SELF LEVELING TYPE

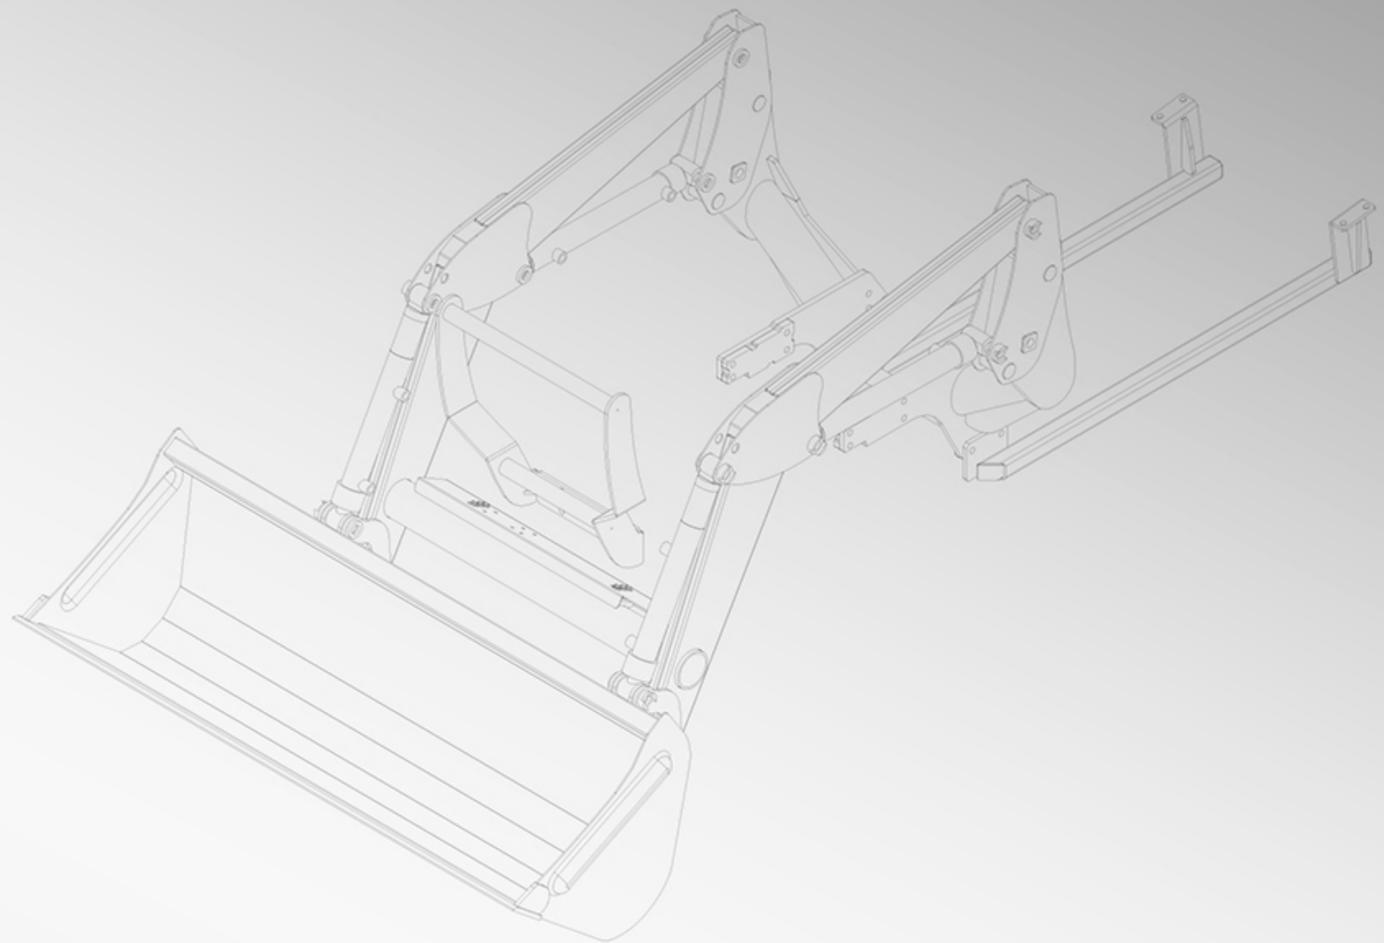

LS Tractor

LS LOADER

OPERATOR MANUAL

LS TRACTOR

LL3106

WARRANTY CONDITIONS

Warranty Coverage :

LS Mtron Tractor Division, herein referred to as LS Mtron, undertakes to replace or repair any part of a LS loader where damage has been proven to be caused by defects in material or workmanship.

This Warranty is valid for a period of 1 year from the date of the original retail sale. Parts replaced or repaired under the terms of this Warranty are guaranteed only until the original warranty expires. Warranty only applies to the original purchaser.

It is further understood and agreed that the defect should be immediately reported to the Selling Dealer. The Selling Dealer will generally perform Warranty repairs or replacements and the Purchaser shall deliver the LS Mtron Loader to the Dealer's place of business or repair.

The obligation of LS Mtron to the Purchaser under this Warranty is limited to the repair or replacement of defective parts by an authorized LS Mtron dealer. Repair or replacement in accordance with this Warranty shall constitute fulfillment of all liabilities of LS Mtron and the Selling Dealer in respect to LS Mtron Loaders.

There are no warranties beyond those which expressly appear herein. Any implied warranty of merchantability or fitness for a particular purpose is specifically exclude here from.

Warranty Provisions :

LS Mtron's liability under this warranty is subject to the observance by the Purchaser of the following provisions:

- ▶ The purchaser shall at all times in the operation of any LS Mtron Product, use those brands and grades of lubricating oils, lubricants or fuel and spare parts officially approved by LS Mtron.
- ▶ The LS Mtron Loaders shall have been used in accordance with the procedures specified in the Operator's Manual. This Warranty does not extend to damage resulting from misapplication, abuse, misuse, failure to preform maintenance, negligence, fire, accidents or changes or faulty mounting carried out by the Purchaser. When making a Warranty exchange of parts, the Purchaser shall compensate LS Mtron for the time that the parts have been used if they have been exposed to extreme wear.
- ▶ Compensation is not paid for physical harm, deadlock, resulting damages or other losses.
- ▶ To obtain warranty service, the Purchaser must (1) report the product defect to an authorized LS Mtron dealer and request repair within the applicable warranty term and (2) present evidence of purchase.
- ▶ The Warranty shall be void if the LS Mtron Loader has been altered or repaired outside of a LS Mtron dealership or travel of dealer personnel to customer location for Warranty repair. The customer shall also pay any premium for overtime labor requested by the customer.
- ▶ Temporary repairs or additional costs due to the work being performed after normal working hours will not be compensated.
- ▶ The above warranty is in lieu of all other warranties on LS Mtron's behalf and neither party assumes any other liability in connection with LS Mtron's Products.

Right To Make Design and Product Changes :

LS Mtron reserves the right to make changes in the design and other changes in its LS Mtron Products at any time without incurring any obligation with respect to any product previously ordered, sold or shipped.

PLEASE NOTE :

Make sure all potential operators of the this equipment review this manual and all safety messages contained within



This safety symbol indicates important safety messages in this manual. When you see this symbol, carefully read the message that follows and be alert to the possibility of personal injury or death.

Table of Contents

■ Safety Precautions	-----	4
■ Safety Decals	-----	8
■ Loader Specifications	-----	9
■ Introduction	-----	10
■ Tractor Preparation	-----	11
■ Loader Operation	-----	12
■ Loader Removal	-----	14
■ Loader Mounting	-----	15
■ Lubrication and Maintenance	-----	16
■ Trouble Shooting	-----	18
■ Hydraulic System Schematic	-----	22
■ Torque Tightening Chart	-----	23
■ Parts Illustrations	-----	24
General Information		24
Bucket Assembly		25
Mounting Frame Assembly		26
Grill Assembly		27
Boom Assembly		28
Hydraulic piping		30
Boom Cylinder		32
Bucket Cylinder		33
Decals		34
■ Loader Installation	-----	36

SAFETY PRECAUTIONS

Most tractor and/or loader equipment accidents can be avoided by following simple safety precautions. The safety information given in this manual does not replace safety codes, insurance requirements, federal, state, and local laws. Make sure your machine has the correct equipment required by your local laws and regulations. Understand that your safety and the safety of other persons are measured by how you service and operate this loader.

Know the position and operations of all controls before you try to operate. Make sure you check all controls in a safe area before starting.

Read this manual completely and thoroughly and make sure you understand all controls. All equipment has a limit. Make sure you are aware of the stability and load characteristics of this loader before you begin operation.



This safety alert symbol indicates important safety messages in this manual. When you see this symbol, carefully read the message that follows and be alert to the possibility of personal injury or death.



SAFETY PRECAUTIONS



READ MANUALS AND DECALS

- ▶ Read and understand both the tractor and the loader Operator Manuals and all decals before using the loader.
- ▶ Lack of knowledge can lead to accidents.
- ▶ It is the loader owner's responsibility to make sure anyone operating the loader reads and understands this manual first before operating the machine.
- ▶ Follow all safety, operating, and service instructions.
- ▶ Replace damaged or illegible safety labels. See following pages for required labels.

ROPS AND SEAT BELT

- ▶ Equip your tractor with an approved rollover-protective structure (ROPS) or ROPS Cab and seat belt for your protection.
- ▶ ROPS (Roll-Over Protective Structures) and seat belt equipped tractors are recommended for operator use in all loader operations.
- ▶ Operator should wear safety hard hat, safety glasses, safety shoes, and other PPE. Avoid wearing loose clothing or jewelry that may catch in moving parts.
- ▶ Use seat belt as specified by tractor/ROPS manufacturer.

YOURSELF

- ▶ Do not stand, walk, or work under a raised loader bucket or attachment unless it is securely blocked and held in position.
- ▶ Operate controls only when properly seated in the operator's seat.
- ▶ Only one person, the operator, should be on the machine when it is in operation.
- ▶ Accidental movement of valve handle/handles or leak in the hydraulic system could cause the loader to drop, or attachment to dump, causing severe injury.

OTHERS

- ▶ Do not allow anyone in loader work area, under raised loader, or to reach through the loader boom when the bucket or attachment is raised.
- ▶ A frequent cause of personal injury or death is persons falling off and being run over. Inadvertent movement of the loader or attachment could result in serious injury or death.
- ▶ Do not permit others to ride on your tractor, loader, bucket, or any attachment.
- ▶ Do not lift or carry anyone on buckets, forks, probes, or any other portion of the loader or loader attachments.
- ▶ Do not allow children or unqualified persons to operate equipment.