

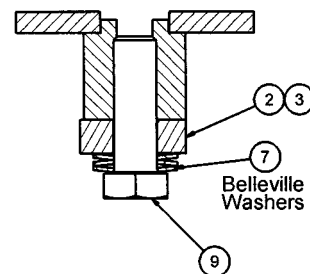


ADAPTER DRAWING & PARTS LIST

For Adapters with Skid Steer Connection

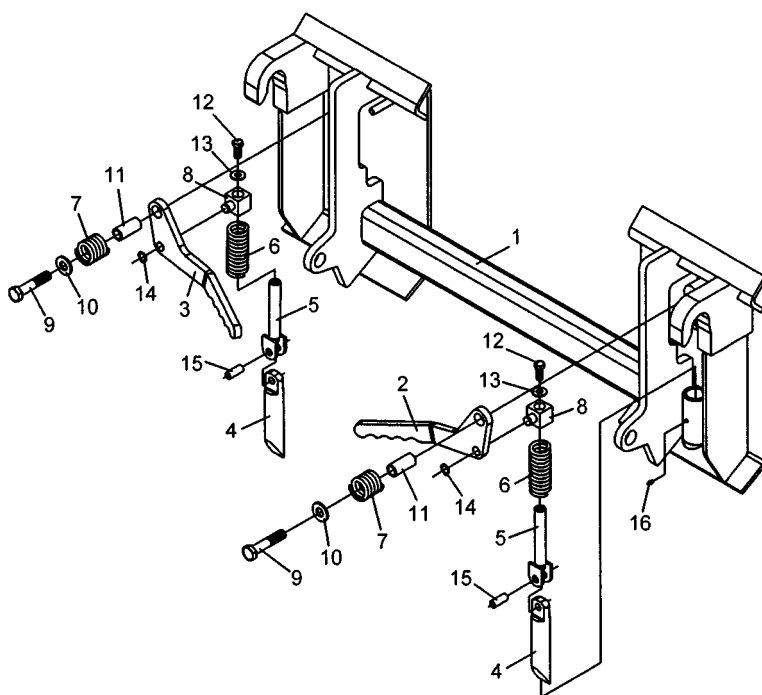

See Notice Below

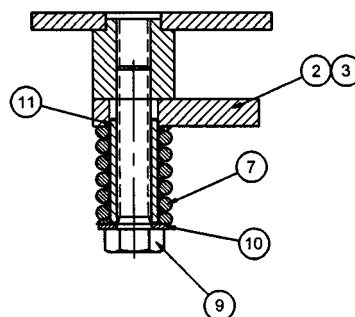

NOTICE: Some adapters with the "Universal" Skid Steer connection have 5/8" concave "Belleville" washers to provide tension on the latch handles. Other adapters have a compression spring to provide tension on the latch handles. These parts are **NOT** interchangeable. When ordering replacement parts, check to make sure the correct parts are ordered.

Ref. No.	Part No.	Description	No. Req'd.
1	-----	Main Frame Weldment (not available as repair part)	1
2	832586	Lever, Right Hand (0.891" Dia. Hole) w/Springs	1
	832546	Lever, Right Hand (0.656" Dia. Hole) w/Belleville Washers	1
3	832587	Lever, Left Hand (0.891" Dia. Hole) w/Springs	1
	832547	Lever, Left Hand (0.656" Dia. Hole) w/Belleville Washers	1
	831988	Lever (for 831980 only)	2
4	832565	Lockpin, Plated	2
5	832566	Spring Rod Weldment	2
6	832567	Spring, Skid Steer Latch	2
7	832589	Spring, Adapter Lever	2
	2502024	Washer, Belleville 5/8"	6
8	832593	Block, Snap Ring Pivot	2
9	2503134	Bolt 5/8"-11NC x 3" Hex Head Gr. 5 (w/Springs)	2
	2503152	Bolt 5/8"-11NC x 2" Hex Head Gr. 5 (w/Belleville Washers)	2
10	2501044	SAE Flat Washer 5/8"	2
11	832588	Bushing, Adapter Handle	2
12	2503338	Bolt 7/16"-14NC x 1" Hex Head Gr. 5	2
13	2501007	Flat Washer 7/16"	2
14	2504280	Retaining Ring 5/8"	2
15	2504266	Roll Pin 1/2" x 1 1/4"	2
16	2504004	Grease Zerk 1/4" Drive	2