

BORELLO[®]

GIORAMI NEW 8



SPARE PARTS BOOK

SPARE PART LIST

GIORAMI NEW 8

How to order spare parts :

The following pages contains the list of spare parts.


- The first column indicates the spare part position in the drawing.
- The second columns indicates the spare part code.
- The third column indicates the quantity of parts each drawing.
- The fourth column indicates the description of the spare part.
- The last column indicates the size (unit of measure) of the spare part.

The code contains the information about each spare part, as shown below.

To order spare parts simply indicate the relative code and quantity.


Of course, further details (description, size) would allow us to avoid any mistakes.

TAB. 1 GN 8 BL

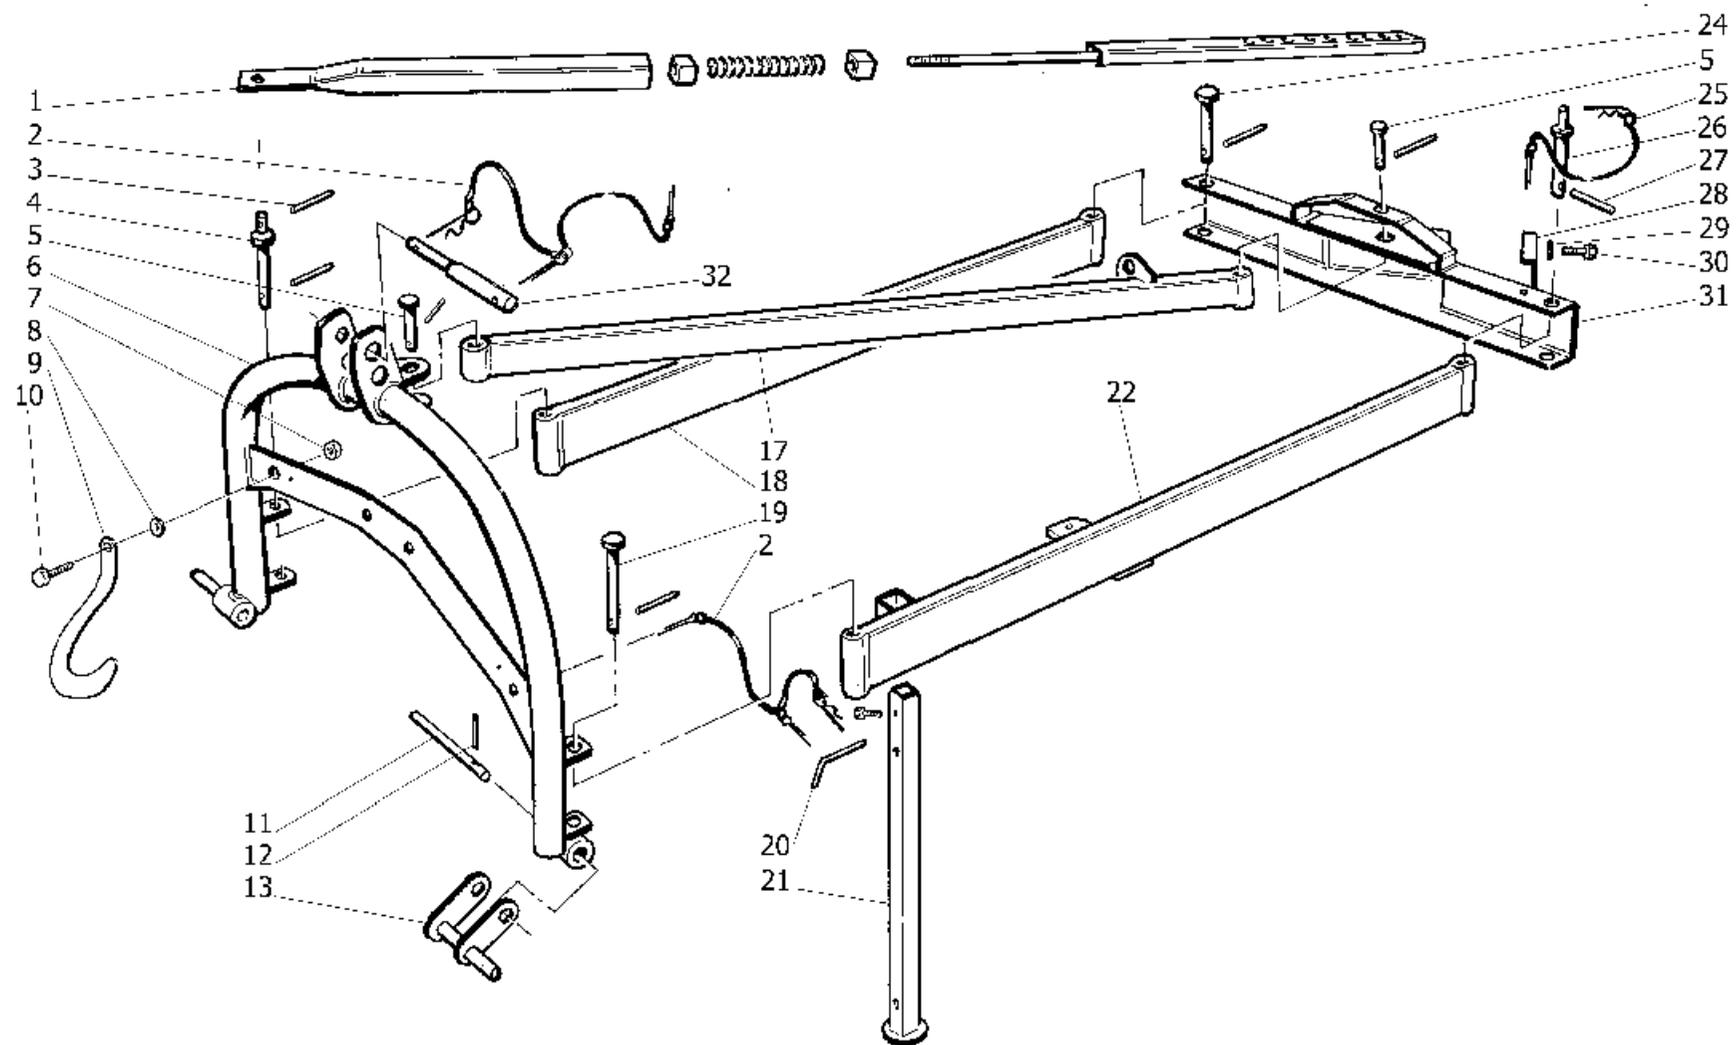


GIRO RAMI NEW 8		FRAME							TAB 01
Pos.	Code	Q.ty	Description	Measure	Pos.	Code	Q.ty	Description	Measure
1	1855.0	1	Regulation bar and shock absorber		18	0041.0	1	Right tubular	
2	1100.0	2	Pin with lace		19	0066.0	1	Pin	Ø 22
3	0098.0	1	Elastic pin	Ø 6x45	20	0219.0	1	Pin	Ø 12
4	0049.0	1	Pin	Ø 22	21	0074.0	1	Small stand	
5	0044.0	2	Pin	Ø 22	22	0040.0	1	Left tubular	
6	0039.0	1	Drawbar		24	0054.0	1	Pin	Ø 22
7	0088.0	1	Self locking nut	MA 12	25	1137.0	1	Pin with lace	
8	0032.0	1	Washer	Ø 12	26	0056.0	1	Pin	Ø 22
9	1168.0	1	Cardan support		27	0067.0	6	Elastic pin	Ø 6x30
10	0321.0	1	Bolt	M 12x35	28	1824.0	1	Cover	
11	0210.0	1	Two point pin		29	0737.0	2	Washer	Ø 8
12	1179.0	2	Elastic pin	Ø 8x50	30	0231.0	2	Bolt	M 8x20
13	0209.0	1	Rocker		31	0042.0	1	Gearbox support	
17	0043.0	1	Top tie rod		32	1901.0	1	Three point pin	

TAB. 2 GN 8

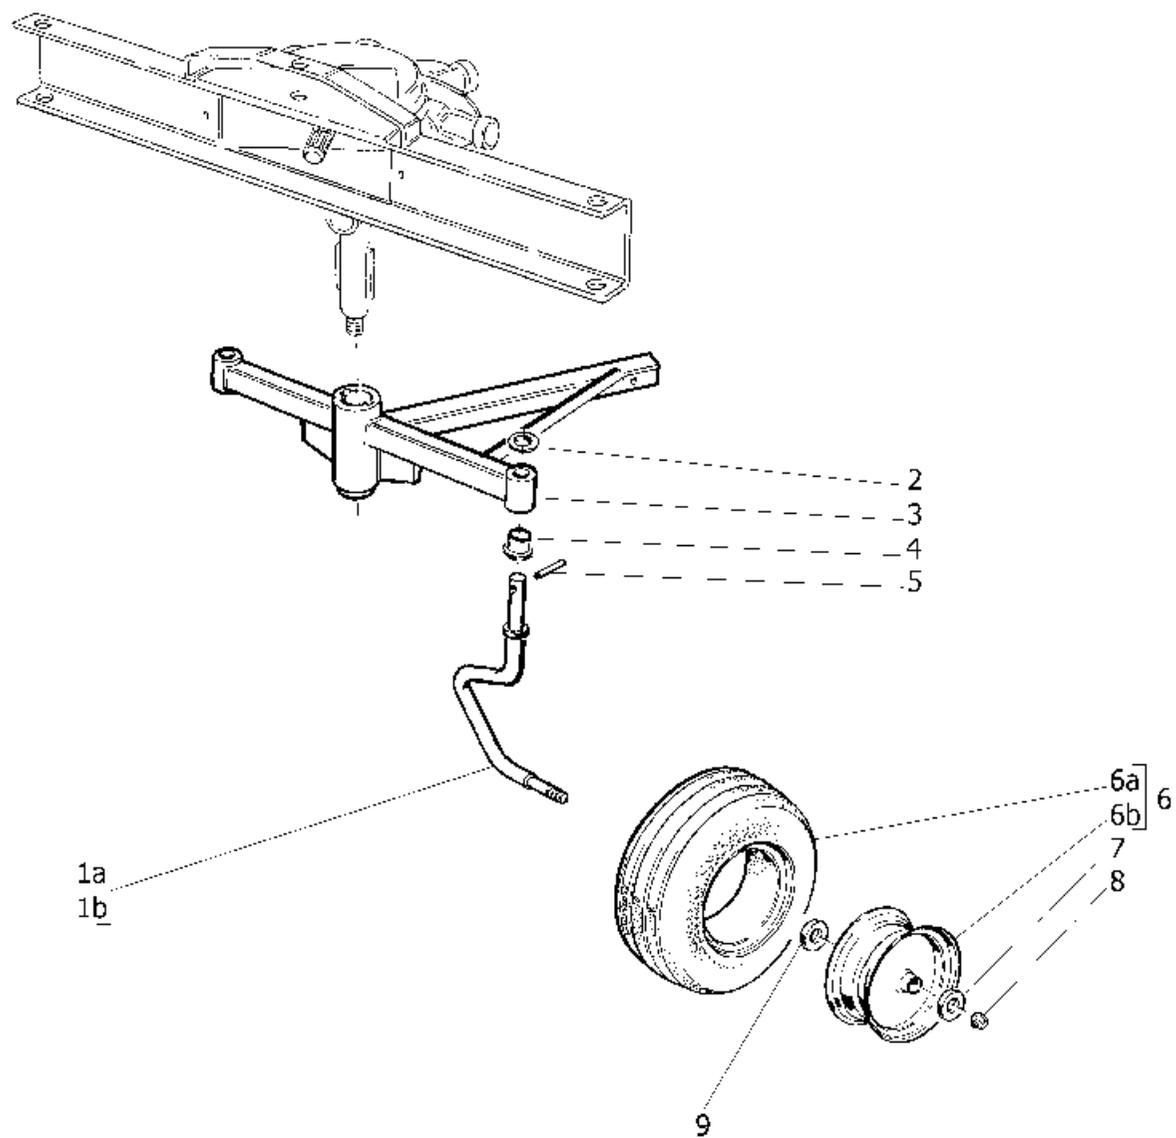

GIRORAMI NEW 8			AXLE	TAB 02
Posit.	Code	Quantity	Description	Measure
1 a	0099.0	1	Right wheel stud	
1 b	1801.0	1	Left wheel stud	
2	0361.0	2	Washer	Ø 30
3 a	1861.0	1	Narrow axle 140-160	
3 b	1802.0	1	Broad axle 180-240	
4	0097.0	2	Bush	Øi 30
5	0098.0	2	Elastic pin	Ø 6x45
6	0101.0	2	Complete wheel	
6 a	0105.0	2	Tire	
6 b	0120.0	2	Disk with bearings	
7	0108.0	2	Dust cover	
8	0886.0	2	Self locking nut	MA 16
9	0100.0	2	Dust cover	


TAB. 3 GN 8

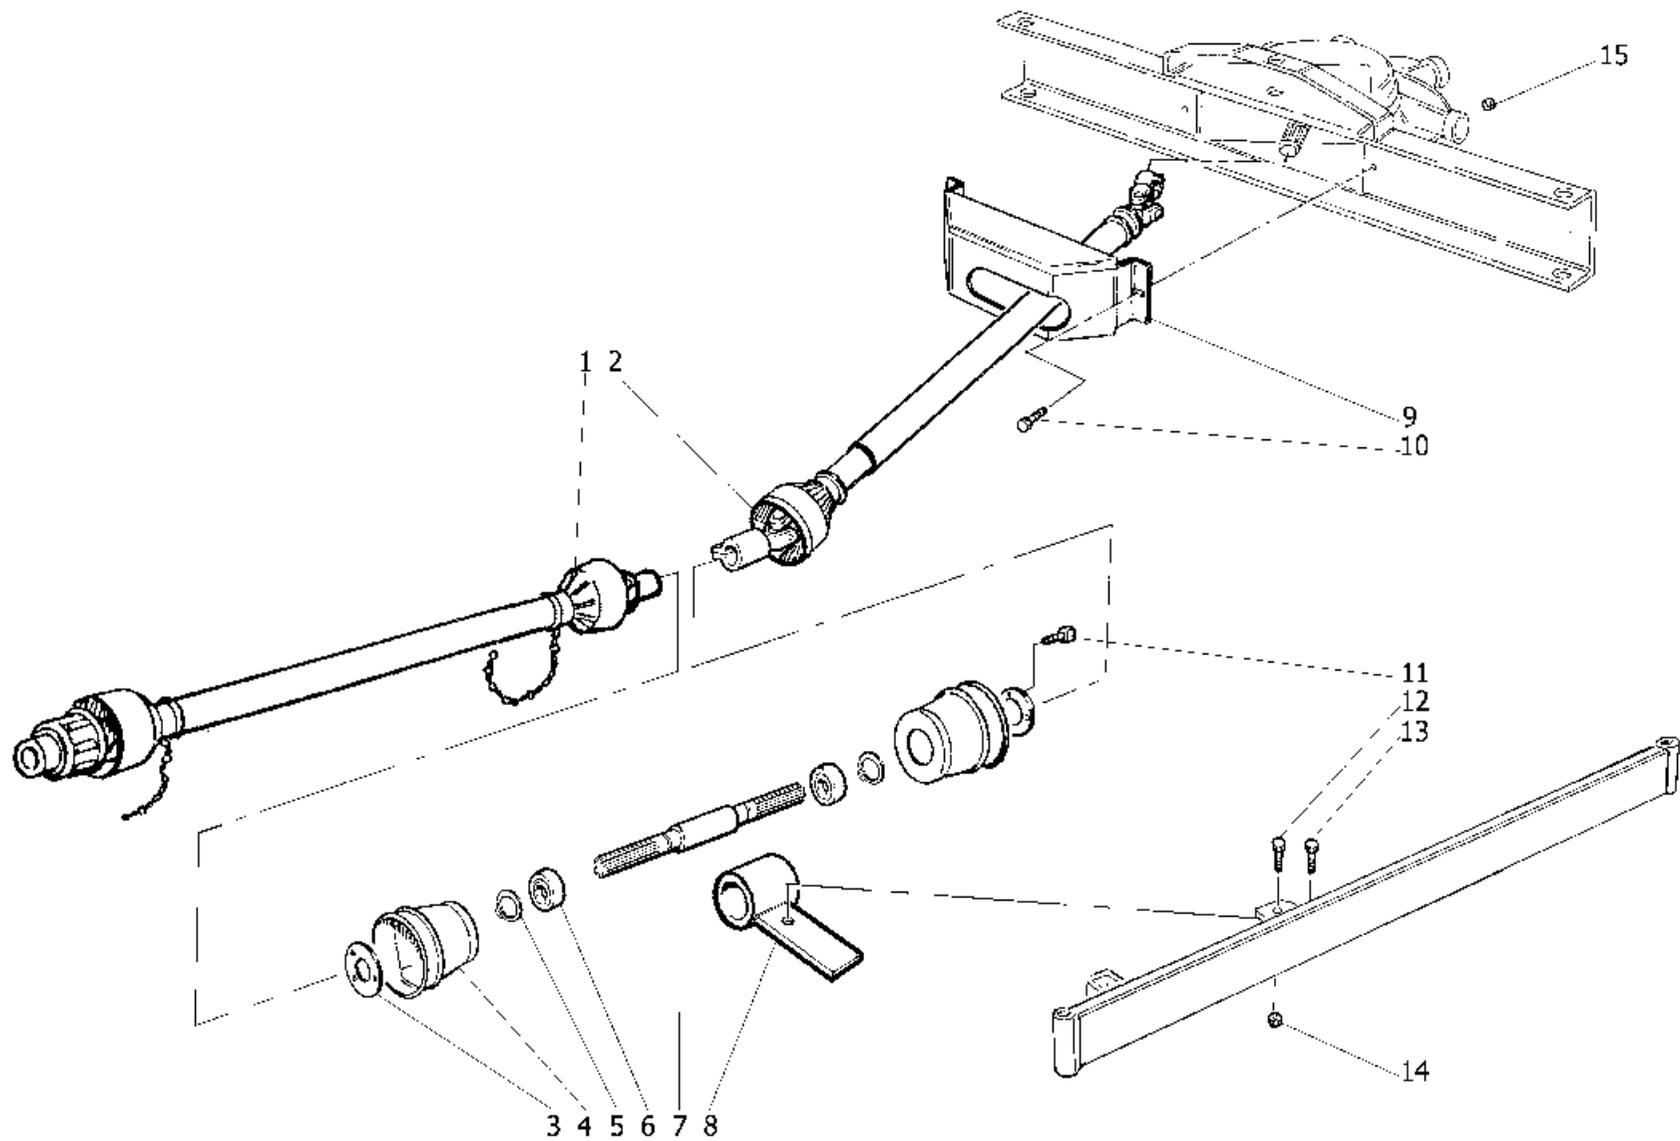

GIRORAMI NEW 8		BL TRANSMISSION			TAB 03
Posit.	Code	Quantity	Description	Measure	
1	1860.0	1	Cardan shaft with clutch	8213200	
2	1811.0	1	Cardan shaft	8200204	
3	1115.0	2	Bracket		
4	1122.0	2	Joint protection		
5	0011.0	2	Snap ring	E 35	
6	0076.0	2	Radial bearing	6207-2RS1	
7	0077.0	1	Shaft		
8	0078.0	1	Support		
9	1897.0	1	Cardan protection		
10	1119.0	2	Bolt	M 8x25	
11	1117.0	6	Bolt	M 6x15	
12	1879.0	1	Bolt	M 18x70	
13	0079.0	1	Bolt	M 16x40	
14	0080.0	1	Self locking nut	MA 18	
15	0234.0	2	Self locking nut	MA 8	


GIRORAMI NEW 8		GEARBOX ROR_8		TAB 04
Posit.	Code	Q.ty	Description	Measure
1	0396.0	1	Threaded locking ring	M 40x1,5
2	0397.0	1	Pressure spring Øe 70 Øi 40,5 sp. 4	Øe70 Øi40,5 sp. 4
3	0398.0	1	Greaser	M 10x1,5
4	0445.0	1	Pinion cover ROR_8/9	
5	0401.0	1	Roller bearing	Øi 20 Øe 26 h 16
6	0402.0	1	Pinion	Z= 10 M= 3.75
7	0403.0	1	Radial bearing	Øi35 Øe 72 h 17
8	0404.0	1	Snap ring	Ø35 sp. 1,5
9	0405.0	1	Snap ring	Ø72 sp. 2,5
10	0406.0	1	Oil seal	Øi 35 Øe 72 h 10
11	0407.0	1	Snap ring	Ø110 sp. 4
12	0457.0	1	Radial bearing	Øi50 Øe110 h 27
13	0409.0	1	Washer	Øe62 Øi50 sp. 3
14	0410.0	8	Bolt	M 10x25
15	0411.0	1	Snap ring	Ø50 sp. 3
16	0446.0	1	Crown	Z= 68 M= 3.75
17	0447.0	1	Central case ROR_8.02	
18	0415.0	8	Oil seal	Øi35 Øe45 h 7
19	0416.0	2	Snap ring	Ø50 sp. 2
20	0417.0	1	Cam ROR_8/9	
21	0418.0	8	Lever arm ROR_8/9	
22	0419.0	8	Conic roller	
23	0420.0	1	Sunk key	10x8x50
24	0421.0	1	Sunk key	10x8x45
25	0448.0	1	Sunk key	10x8x110
26	0449.0	1	Central shaft	
27	0423.0	1	Radial bearing	Øi50 Øe90 h 20
28	0424.0	1	Oil seal	Øi50 Øe72 h 8
29	0425.0	1	Lower cover ROR_8/9	
30	0090.0	6	Bolt	M 10x30
31	0427.0	1	Plug	3/8" gas
32	0428.0	1	Plug	1/2" gas

TAB. 5 GN 8

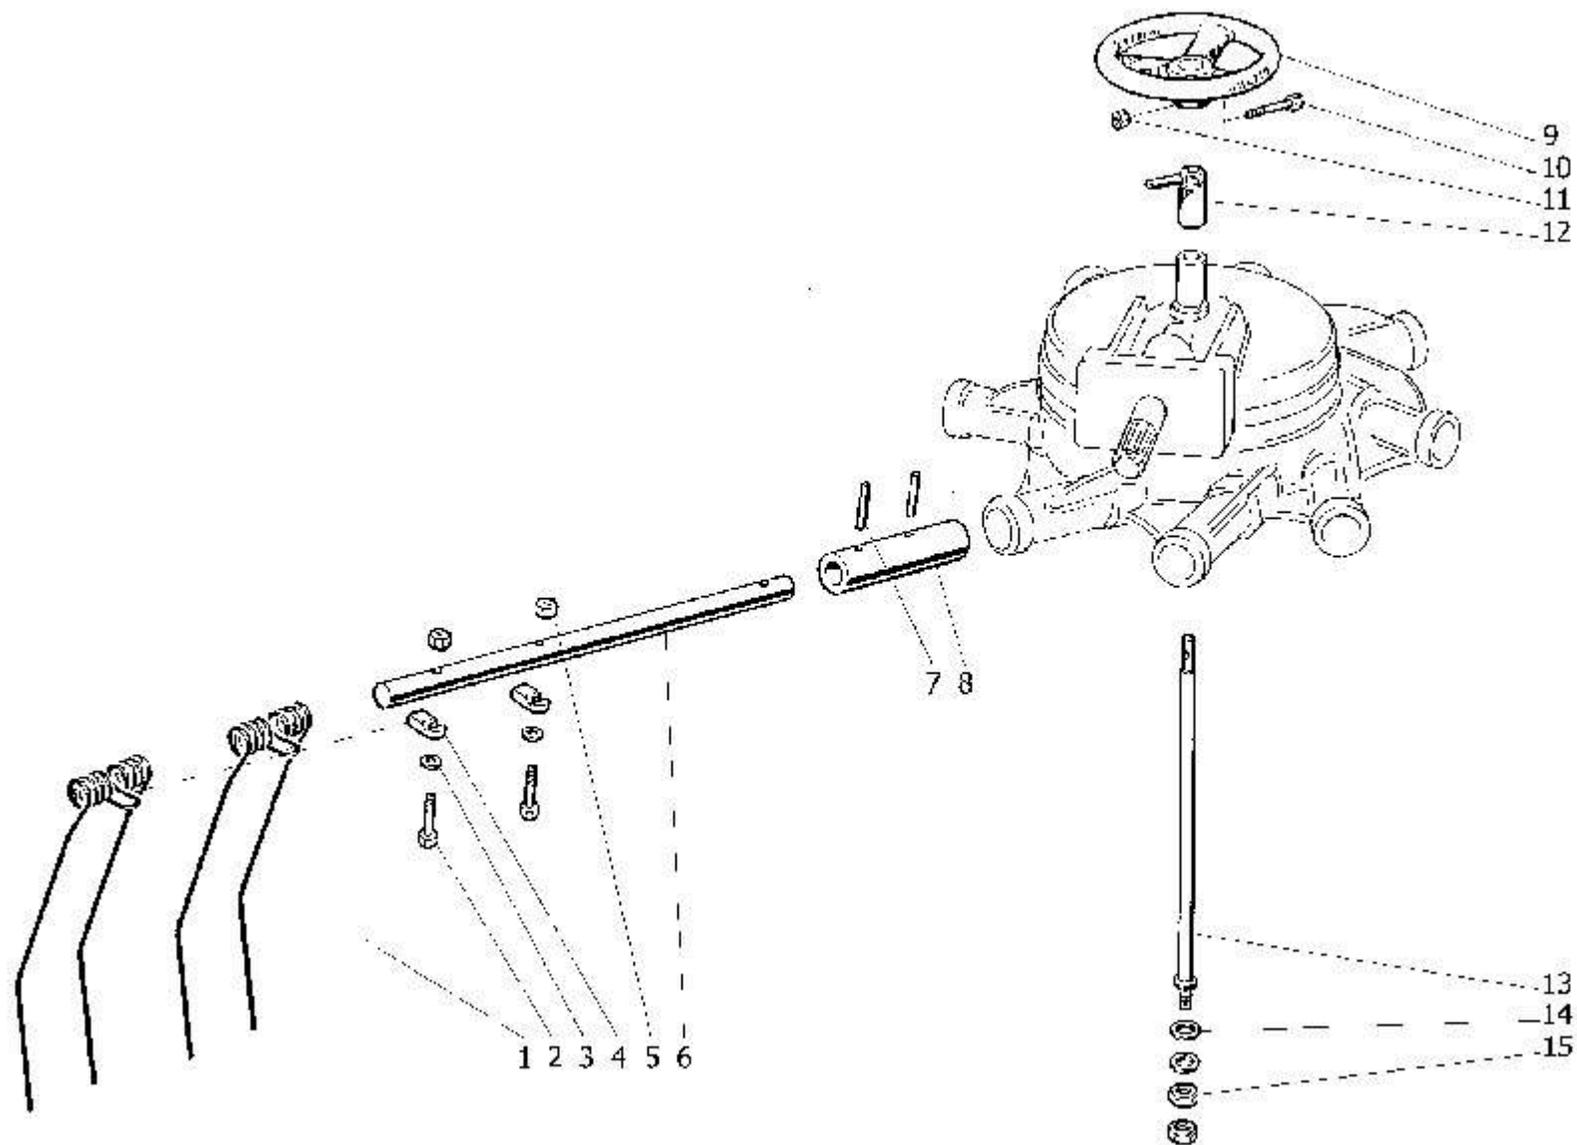

GIRORAMI NEW 8		ARM AND RAKE		TAB 05
Posit.	Code	Quantity	Description	Measure
1	0086.0	16	Tooth spring	
2	0084.0	16	Bolt	M 12x70
3	0085.0	16	Washer	Ø 12
4	0087.0	16	Spring locking	
5	0088.0	16	Self locking nut	MA 12
6	1819.1	8	Arm for G140-8	405 mm
6	1819.2	8	Arm for G160-8	485 mm
6	1819.3	8	Arm for G180-8	575 mm
6	1819.4	8	Arm for G200-8	680 mm
6	1819.5	8	Arm for G220-8	775 mm
6	1819.6	8	Arm for G240-8	875 mm
7	0083.0	16	Elastic pin	Ø 12x50
8	1881.0	8	Bush	
9	1825.0	1	Leaflet	
10	1882.0	1	Bolt	M 6x60
11	1120.0	1	Self locking nut	MA 6
12	3140.0	1	Nut with pin	
13	3139.0	1	Adjusting screw	
14	1806.0	2	Washer	Ø 22
15	1805.0	2	Nut	MB 22

TAB. 6 GN 8

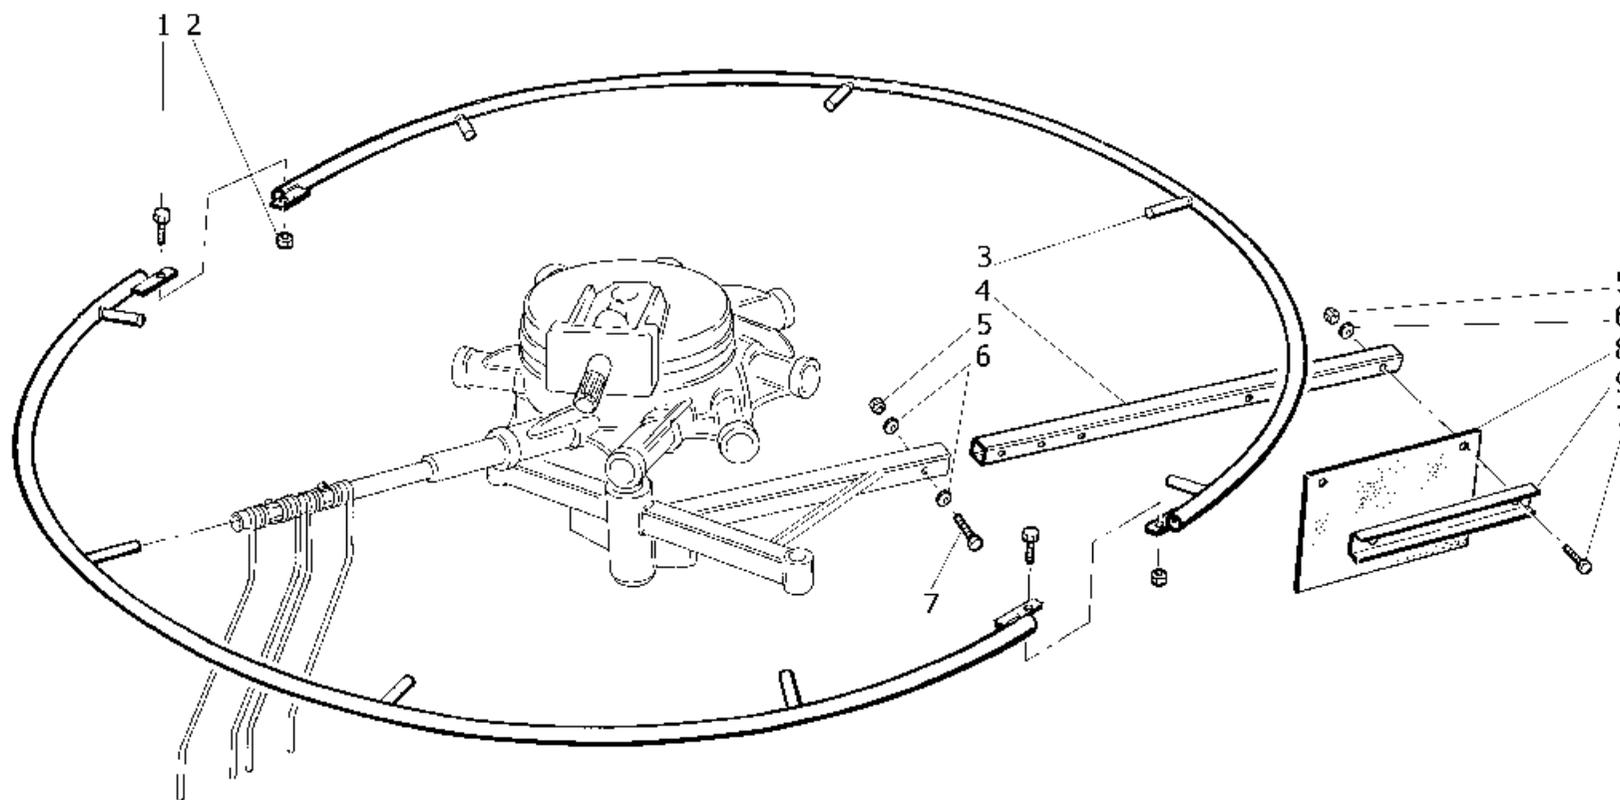

GIORAMI NEW 8		PROTECTION RINGS			TAB 06
Posit.	Code	Quantity	Description	Measure	
1	0090.0	4	Bolt	M 10x30	
2	0091.0	4	Self locking nut	MA 10	
3	1813.1	1	External ring for G140-8	Ø 1400	
3	1813.2	1	External ring for G160-8	Ø 1600	
3	1813.3	1	External ring for G180-8	Ø 1800	
3	1813.4	1	External ring for G200-8	Ø 2000	
3	1813.5	1	External ring for G220-8	Ø 2200	
3	1813.6	1	External ring for G240-8	Ø 2400	
4	0116.1	1	Woodenlock for G140 and G160	600 mm	
4	0116.2	1	Woodenlock for G180 and G200	750 mm	
4	0116.3	1	Woodenlock for G220 and G240	900 mm	
5	0234.0	3	Self locking nut	MA 8	
6	0737.0	3	Washer	Ø 8	
7	1883.0	3	Bolt	M 8x60	
8	0117.0	1	Woodenlock plate		
9	1898.0	1	Woodenlock blade		

RANKIN EQUIPMENT CO.

PO BOX 168, YAKIMA

WA 98907-0168

U.S.A.

Phone: 509-453-8271

Fax: 509-457-2456

