

PREFACE

This service manual is to provide servicing personnel with information for precise and quick service for **MT** series tractors with high-end technologies. It contains various information on the general specifications, fundamental structure and operating principle, instructions for disassembly, assembly, inspection and adjustment, and troubleshooting on each component for easier and precise service.

This vehicle should be well-maintained and serviced properly for ultimate satisfaction of users. Therefore, it is necessary for servicing personnel to understand information in this manual thoroughly and keep it handy for service.

Most accidents during servicing are occurred by negligence on safety precautions and instructions. Therefore, servicing personnel should be fully aware of service procedures, methods, inspection points and safety precautions outlined in this manual for precise and safe service as well as ultimate satisfaction of customers.

As LS genuine parts are manufactured under the strict quality assurance system, only genuine parts should be used in this tractor to maintain its optimal condition. LS Mtron always put every effort into development and manufacture of quality products.

Also, information contained in this manual is subject to change without notice for quality and performance improvement of this tractor.

Keep this service manual in a safe and handy place. If there is any typo, wrong information or question for this manual, feel free to contact LS Mtron.

※ REMARKS

- This manual does not contain information for every possible accident and precautions during service. Therefore, the tractor should be serviced only by well-trained servicing personnel with care.
- Using unspecified parts, including engine oil and transmission fluid, or poor-quality fuel can damage the tractor severely.
- Information and figures in this manual should not be copied or used without prior permission by LS Mtron.

MEANING OF SAFETY SYMBOLS

Safety precautions outlined in this manual and information in DANGER, WARNING and CAUTION labels attached on the vehicle body should be followed strictly to avoid damage and injuries. Servicing personnel should be thoroughly aware of and follow such information and precautions.

If any of the DANGER, WARNING and CAUTION decals on the tractor is damaged or missing, have your Dealer restore it to its original location.

Information with safety symbols should be strictly followed for ultimate safety. The meaning of each symbol is as follows:

 DANGER	This indicates the potential hazards that injuries or even death can happen if no precaution is taken.
 WARNING	This indicates the most serious hazards that serious injuries or even death can happen if no precaution is taken.
 CAUTION	This indicates the potential hazards that minor injuries can happen if no precaution is taken. Also, this symbol can be used as a warning for unstable behavior.
 IMPORTANT	This indicates important work procedures and technical information for user's convenience.
 NOTES	This indicates information for user's interest and help.

※ IMPORTANT

- The safety symbols in this manual cannot indicate every possible hazard. If any hazard not specified in this manual occurs, contact your Dealer immediately.

HOW TO USE THIS MANUAL

1. TARGET READER

This manual is designed for readers who have intermediate service knowledge and technical skills for this tractor. Servicing personnel should understand instructions and information in this manual thoroughly for rapid and precise inspection and service.

2. CONTENTS

This manual is published in book form and consists of several chapters: Preface, Safety and General Information, Engine, Clutch & Transmission, Front & Rear axle, Brake System, Hydraulic System, Electric System, Frame & Cabin, A/C & Heater. and Index. As specifications, figures and information specified in this manual are based on the standard option vehicle, some details might be different depending on the vehicle model and type.

3. STRUCTURE

This manual is structured as follows:

TABLE OF CONTENTS

1

V BRAKE

2

TABLE OF CONTENTS

V-1 GENERAL INFORMATION	V-2 SERVICE
1. SPECIFICATIONS..... 5-4	1. TROUBLESHOOTING..... 5-10
2. STRUCTURE AND FUNCTION 5-5	2. COMPONENT DESCRIPTION.....5-11
2.1 Main brake..... 5-5	2.1 G650S01 Brake..... 5-11

HEADER


1

V BRAKE SYSTEM

3 DISASSEMBLY AND ASSEMBLY

3.1 BRAKE

1. Remove the final drive case. (Refer to the instruction for rear axle disassembly.)

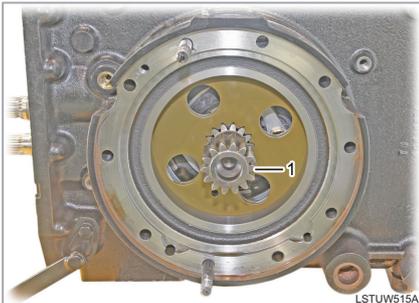

LSTUW515A

2. Remove the sun gear (1).

4

MT MODEL

5

I SAFETY AND GENERAL INFORMATION
 II ENGINE
 III CLUTCH & TRANSMISSION
 FRONT & REAR AXLE

3.2 BRAKE MASTER CYLINDER




LSTUW528A

1. Unscrew the mounting knobs (1) and separate the body panel (RH) (2). Then, disconnect the ignition switch connector and remove the body panel (RH).

3

HOW TO USE THIS MANUAL

FOOTER

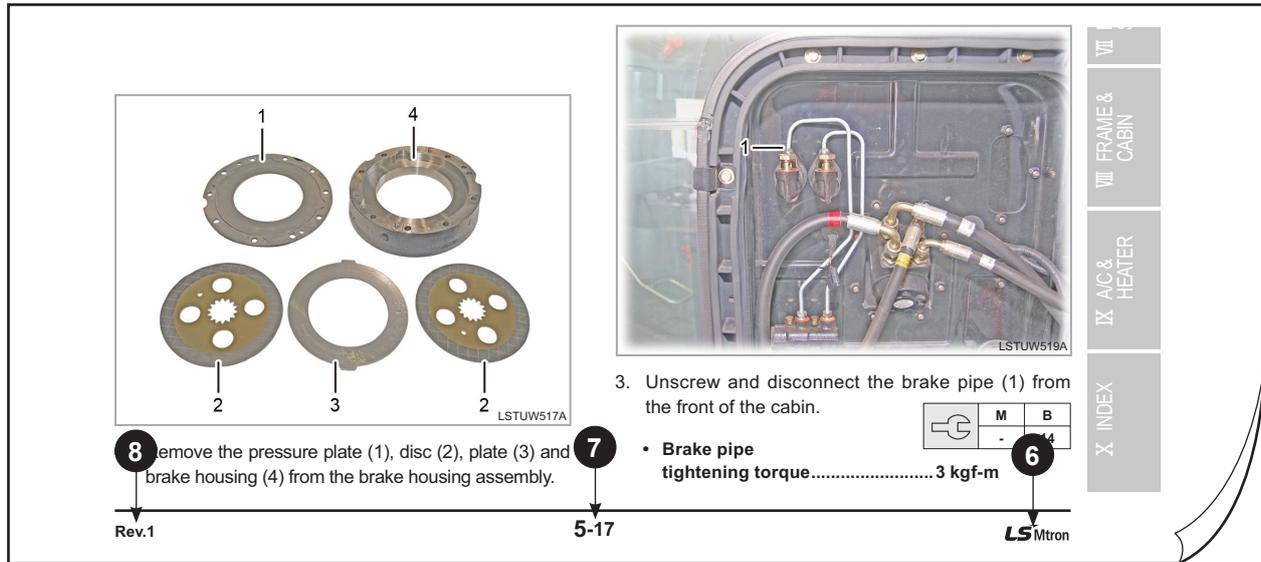

① Chapter

This section indicates the corresponding chapter, such as Safety and General Information, Engine, etc.

② Table of Contents

This section shows the corresponding sections and sub-sections. For the chapter Safety and General Information and Engine, the section number is sequentially given. For the other chapters, they are divided into two main sections: general information and service.

③ Description

Generally, description is located right below the corresponding figure. Some large figures and charts are displayed on pages without description. Each illustration is assigned with its own number and large illustration over A4 size is on A3.

④ Model

This indicates the vehicle model for this manual. Where an illustration or information applies only to certain types, this is indicated in the text.

⑤ Side chapter index

This indicates chapter index. The current chapter is highlighted in a dark color while the other chapters are grayed for easy identification.

⑥ Company logo

This is the company logo. It is on the left or the right side of its page to identify its odd or even page.

⑦ Page number

The page number is assigned as follows:

Example) 5-17: Page 17 of Chapter 5

⑧ Revision number

Indicates the number of revisions made to this manual. This number is printed on the page that reflects this revision. If a page has been revised, it is to be used in place of the page used before revision and it is not necessary to keep the old page.

4. Others

Part names referred in this manual are standardized to identify their functions efficiently and they may be different from names in other materials, such as the part list and user manual, and on the tractor's decals and labels. All illustration and pictures in this manual are based on the latest product information available at the time of publication. Therefore, some of the information in this manual may differ from the machine you have. The specifications and other information are subject to change for the purpose of improvement without notice.

TABLE OF CONTENTS

* SAFETY AND GENERAL INFORMATION	I
* ENGINE	II
* CLUTCH & TRANSMISSION	III
* FRONT & REAR AXLE	IV
* BRAKE	V
* HYDRAULIC SYSTEM	VI
* ELECTRICAL SYSTEM	VII
* FRAME & CABIN	VIII
* A/C & HEATER.....	IX
* INDEX.....	X

I SAFETY AND GENERAL INFORMATION

TABLE OF CONTENTS

1. SAFETY TIPS.....	1-23
1.1 General safety tips	1-23
1.2 To avoid personal injuries.....	1-24
1.3 During servicing.....	1-25
1.4 Environment protection	1-29
2. SAFETY DECALS	1-30
2.1 Mounting location	1-30
3. GENERAL INFORMATION	1-35
3.1 Serial number	1-35
3.1.1 Manufacture's serial number.....	1-35
3.1.2 Engine number.....	1-35
3.1.3 Transmission number.....	1-35
3.1.4 Hourmeter	1-35
3.2 External dimensions	1-36
3.3 Specifications	1-37
3.4 Lubricants and Capacity.....	1-40
3.5 Tire maintenance.....	1-41
3.7 Precautions for disassembly and assembly .	1-43
3.7.1 Precautions before starting service....	1-43
3.7.2 Cautions during assembly.....	1-43
3.7.3 Wiring mating section and sheath.....	1-44
3.8 Unit Conversion Table	1-45
3.9 Maintenance schedule chart	1-46
4. APPLICABLE ENGINES.....	1-47

II ENGINE

TABLE OF CONTENTS

1. HOW TO USE THIS MANUAL.....	2-5	4. COMPONENT DESCRIPTION.....	2-68
1.1 Methods of presentation	2-5	4.1 Q110S01-02 Crankcase assy.....	2-68
1.2 Terms used in this manual.....	2-5	4.2 Q110S02-01 Crankcase	2-69
1.3 Safety Caution.....	2-6	4.3 Q115S01-01 Rocker cover & camshaft	2-70
1.3.1 Fire and explosions	2-6	4.4 Q116S01-02 Cylinder head	2-71
1.3.2 Stay clear of all rotating and moving parts..	2-7	4.5 Q120S01-01 Main moving parts.....	2-72
1.3.3 Be careful of exhaust fume poisoning ..	2-8	4.6 Q121S01-01 Valve mechanism.....	2-73
1.3.4 Be careful of falling down	2-8	4.7 Q125S01-01 Fuel system.....	2-74
1.3.5 Be careful of handling fuel, engine oil and LLC	2-9	4.8 Q130S01-01 Timing gear & case	2-75
1.3.6 Be careful of burns	2-9	4.9 Q135S01-01 Cooling system	2-76
1.3.7 Service battery	2-10	4.10 Q140S01-01 Oil system	2-77
1.3.8 When abnormality occurs.....	2-10	4.11 Q145S01-01 Oil pan	2-78
1.3.9 Other cautions	2-11	4.12 Q160S01-01 INlet & outlet manifold.....	2-79
2. GENERAL.....	2-13	4.13 Q166S01-01 EGR	2-80
2.1 General notes before service	2-13	4.14 Q167S01-01 DOC&DPF	2-81
2.2 Fundamental instructions on service.....	2-13	4.15 Q180S01-01 Electric parts 1	2-82
2.3 General information.....	2-14	4.16 Q180S01-02 Electric parts 2	2-83
2.3.1 External structure	2-14	4.17 Q185S01-01 Turbocharger.....	2-84
2.3.2 Main specifications.....	2-17	4.18 Q146S01-02 Balancer.....	2-85
2.3.3 Emission control regulation	2-19	5. DISASSEMBLE AND SERVICE	2-86
2.3.4 Periodic engine and function inspection..	2-21	5.1 Overview for disassembly and service	2-86
2.4 Maintenance service data & special tools..	2-24	5.1.1 Disassemble and service interval - determine.....	2-86
2.4.1 Engine general	2-24	5.1.2 Testing compression pressure.....	2-86
2.4.2 Tightening torque table.....	2-28	5.1.3 Preparation and inspection before disassembly	2-87
2.4.3 Special tools.....	2-32	5.1.4 Disassembly procedure.....	2-87
2.5 Main system	2-34	5.2 Engine removal	2-88
2.5.1 Air intake and exhaust system	2-34	5.3 Engine components disassembly.....	2-96
2.5.2 Lubrication system	2-41	5.3.1 Engine oil	2-96
2.5.3 Cooling system.....	2-42	5.3.2 CCRT	2-96
2.5.4 Injection system	2-43	5.3.3 Electrical components	2-97
2.5.5 Electronic control system	2-52	5.3.4 Fuel system.....	2-97
2.5.6 Charging system	2-65	5.3.5 Cooling system.....	2-98
3. TROUBLE SHOOTING.....	2-66	5.3.6 Intake hose and pipe	2-98
		5.3.7 EGR pipe.....	2-98
		5.3.8 ACV and ACV adapter.....	2-98

TABLE OF CONTENTS

5.3.9 Fuel pipe	2-99	5.4.7 Lubrication system	2-114
5.3.10 Return hose.....	2-99	5.4.8 Cooling system.....	2-118
5.3.11 Injector clamp	2-99	5.4.9 Electrical system	2-120
5.3.12 Injector	2-99	5.5 Important parts inspect and repair.....	2-133
5.3.13 Glow plug	2-99	5.5.1 Piston	2-133
5.3.14 common Rail	2-100	5.5.2 piston and piston ring - inspect	2-133
5.3.15 EGR valve	2-100	5.5.3 Piston ring end gap - measure	2-134
5.3.16 Intake manifold.....	2-100	5.5.4 Piston pin hole and piston pin - measure.....	2-134
5.3.17 Turbocharger.....	2-100	5.5.5 Clearance between connecting rod bushing and piston pin - measure ...	2-135
5.3.18 EGR cooler.....	2-101	5.5.6 Measuring twist of connecting rod....	2-135
5.3.19 Exhaust manifold.....	2-101	5.5.7 Big end of the connecting rod - inspect..	2-135
5.3.20 Rocker arm cover.....	2-101	5.5.8 Crankshaft.....	2-136
5.3.21 Rocker arm shaft assembly.....	2-101	5.5.9 Main bearing oil clearance - inspect.	2-137
5.3.22 Cylinder head	2-102	5.5.10 Crankshaft deflection - measure	2-138
5.3.23 Flywheel	2-102	5.5.11 Crankshaft gear - assembly.....	2-138
5.3.24 Flywheel housing	2-102	5.5.12 Drive gear - assembly	2-139
5.3.25 Crankshaft V-pulley	2-102	5.5.13 Crankcase	2-139
5.3.26 TIMING Gear case front (FR).....	2-103	5.5.14 Cylinder - bore.....	2-140
5.3.27 Hydraulic pump drive gear	2-103	5.5.15 Tappet.....	2-141
5.3.28 Idle gear (A)	2-103	5.5.16 Rear oil seal - Install.....	2-141
5.3.29 High-pressure pump gear	2-103	5.5.17 Rear case - Install	2-141
5.3.30 High-pressure pump.....	2-104	5.5.18 Flywheel - Install	2-142
5.3.31 Idle gear (B)	2-104	5.5.19 Cylinder head bottom surface - Clean ..	2-142
5.3.32 Oil pump assembly.....	2-104	5.5.20 Valve stem seal - Install.....	2-142
5.3.33 Camshaft assembly.....	2-104	5.5.21 Valve and valve spring - Install.....	2-143
5.3.34 Rear gear case	2-105	5.5.22 Cylinder head and Valve mechanism - inspect and repair...	2-143
5.3.35 Oil pan assembly.....	2-105	5.5.23 Each gear play - measure	2-147
5.3.36 Piston & connecting rod assembly .	2-105	5.5.24 Camshaft - measure.....	2-148
5.3.37 Crankshaft assembly.....	2-106		
5.3.38 Tappet & piston cooling jet	2-106		
5.4 Disassembly, structure and inspection of major systems	2-107	6. ENGINE ASSEMBLY	2-151
5.4.1 Cylinder head & valve	2-107	6.1 Precaution before assembly.....	2-151
5.4.2 Engine rear parts.....	2-108	6.2 Crankcase	2-151
5.4.3 Balancer	2-109	6.3 Tappet.....	2-151
5.4.4 Moving system	2-110	6.4 Piston cooling jet	2-151
5.4.5 Turbocharger.....	2-111	6.5 Crankshaft assembly	2-152
5.4.6 Fuel system.....	2-112	6.5.1 Crankshaft sub-assembly	2-152

TABLE OF CONTENTS

6.5.2 Crankshaft - Install	2-152	6.31 Turbocharger lubrication pipe (IN/OUT) ..	2-168
6.6 Crankshaft position sensor - Install	2-153	6.32 Intake manifold	2-168
6.7 Piston assembly and connecting rod	2-153	6.33 EGR valve	2-169
6.7.1 Piston sub-assembling	2-153	6.34 common Rail	2-169
6.7.2 Connecting rod sub-assembling	2-153	6.35 Glow plug	2-169
6.7.3 Piston assembly and connecting rod - install	2-154	6.36 Injector.....	2-169
6.8 Oil pan assembly.....	2-155	6.37 Injector clamp.....	2-170
6.8.1 Secondary balancer sub-assembling ..	2-155	6.38 Return hose.....	2-170
6.8.2 Oil strainer sub-assembling.....	2-155	6.39 Fuel pipe.....	2-170
6.8.3 Oil pan - install	2-156	6.39.1 Installation order of fuel pipe	2-170
6.9 Rear gear case.....	2-156	6.40 ACV and ACV adapter	2-171
6.10 Camshaft assembly.....	2-157	6.41 EGR passage pipe & erg pipe B	2-171
6.11 Oil pump assembly	2-158	6.42 Injector wiring	2-171
6.12 Idle gear (B).....	2-158	6.43 Intake hose and pipe	2-171
6.13 High-pressure pump	2-158	6.44 Fuel filters.....	2-172
6.14 High-pressure pump gear.....	2-159	6.45 Knock sensor.....	2-172
6.15 Idle gear (A).....	2-159	6.46 Water pump assembly.....	2-172
6.16 Hydraulic pump drive gear	2-159	6.47 Thermostat and cover.....	2-172
6.17 Front gear case	2-159	6.48 EGR cooler and oil cooler hose.....	2-173
6.18 Camshaft position sensor.....	2-160	6.49 Alternator	2-173
6.19 Oil filler	2-160	6.50 Cooling fan pulley and V-belt	2-173
6.20 Crankshaft V-pulley	2-160	6.51 Starter.....	2-173
6.21 Rear case	2-160	6.52 DPF bracket and CCRT assembly	2-174
6.22 Flywheel	2-161	6.53 Oil cooler and oil filter	2-174
6.23 Cylinder head	2-162	6.54 Oil gauge and oil drain bolt.....	2-175
6.23.1 Cylinder head sub-assembling	2-162	6.55 Oil replenishment	2-175
6.23.2 Cylinder head - install.....	2-163	6.56 Sensor - Install	2-175
6.24 Push rod	2-164	6.56.1 Intake pressure (P2) sensor.....	2-175
6.25 Rocker shaft assembly	2-164	6.56.2 Intake temperature (T2) sensor.....	2-175
6.26 Adjusting valve clearance.....	2-164	6.56.3 Exhaust temperature (T3) sensor ..	2-176
6.26.1 Checking cylinder No. 1's TDC on compression stroke.....	2-164	6.56.4 DPF temperature (T5) sensor	2-176
6.26.2 Adjusting valve clearance.....	2-165	6.56.5 Coolant temperature sensor.....	2-176
6.27 Rocker arm cover	2-166	6.56.6 Oil pressure switch.....	2-176
6.28 Exhaust manifold.....	2-167	6.56.7 Differential pressure sensor	2-177
6.29 EGR cooler.....	2-167	6.56.8 MAF sensor.....	2-177
6.30 Turbocharger	2-168	DIAGNOSTIC SYSTEM	2-179
